



# C-300/C-650 SERIES SLIDING DOOR KIT INSTRUCTION SHEET FOR 3/4" TO 1-3/8" DOORS



## PARTS LIST (FOR 1 DOOR KIT)

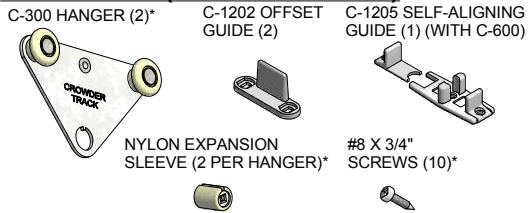

EXTRUDED ALUMINUM TRACK

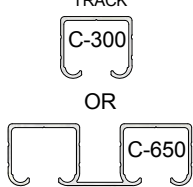


**SPECIFICATIONS:**  
-LOAD CAPACITY:  
75 LBS PER DOOR.

-CAN BE MOUNTED SIDE BY SIDE FOR BY-PASS APPLICATIONS

-3 NYLON WHEELS PER HANGER.


(\* ALL PARTS FOR C-650 KIT ARE 2X QUANTITY OF C-300 KIT)

## DIMENSION DETAILS:

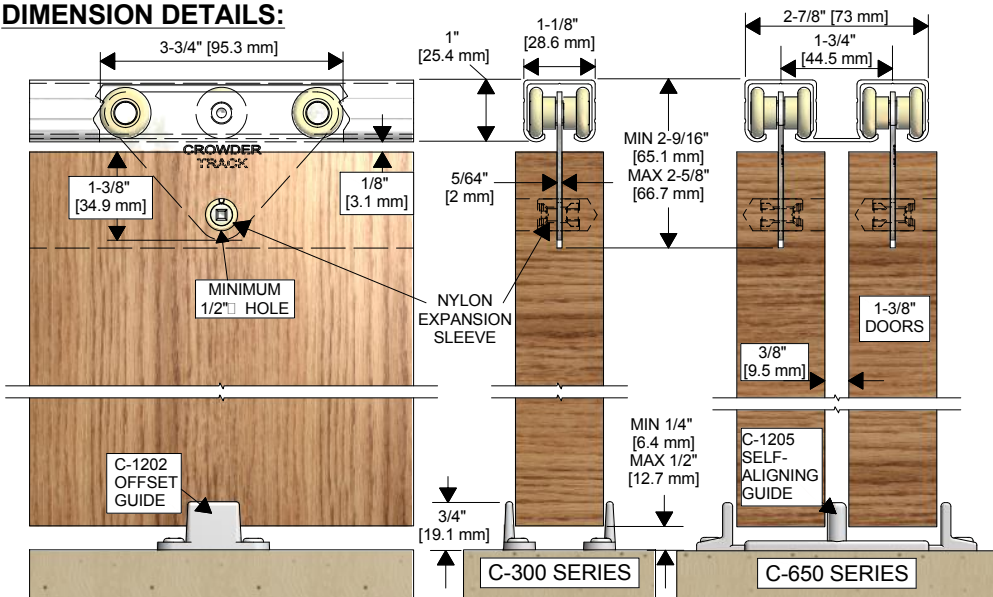


## OPTIONAL PRODUCTS

GUIDE SYSTEM:

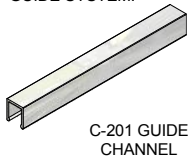

C-201 GUIDE CHANNEL

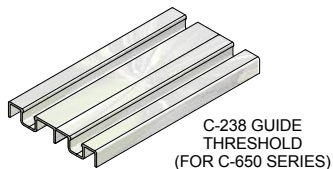

C-238 GUIDE THRESHOLD (FOR C-650 SERIES)




C-200 GUIDE




C-200B SPRING LOADED GUIDE



C-100 DOOR STOP

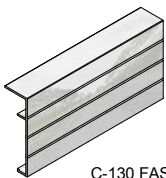

C-130 FASCIA

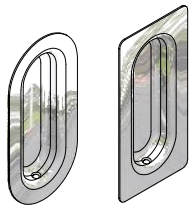

C-70 DOOR PULLS  
C-75 DOOR PULLS



C-35 DOOR LOCK




## INSTALLATION INSTRUCTIONS

### STEP 1


DETERMINE DOOR SIZE/HEADER HEIGHT BASED ON DIMENSIONS SHOWN IN DETAIL VIEWS AND CLEARANCE REQUIRED BELOW DOOR:

-MINIMUM OPENING HEIGHT (A) = DOOR HEIGHT + 1-3/8"  
-MAXIMUM OPENING HEIGHT (A) = DOOR HEIGHT + 1-5/8"

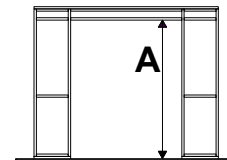

### STEP 2

CUT TRACK TO LENGTH. TRACK LENGTH SHOULD BE EQUAL TO FINISHED OPENING SIZE LESS 1/8". INSERT C-300 HANGERS INTO TRACK AND SECURE TRACK TO HEADER WITH #8 X 3/4" SCREWS (6)\*.

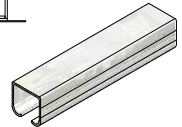


### STEP 3

PREPARE DOOR BY MAKING A SAW CUT THROUGH CENTRE OF DOOR USING TABLE OR "CIRCULAR" SAW. KERF MUST BE 1-1/2" MINIMUM DEPTH (1-5/8" MAXIMUM).



### STEP 4

LOCATE 1/2"Ø CLEARANCE HOLE FOR NYLON EXPANSION SLEEVE ON SIDE OF DOOR (RECOMMEND DRILLING HOLE ON LEAST VISIBLE SIDE. IF POSSIBLE DO NOT DRILL COMPLETELY THROUGH DOOR). LOCATE HOLE 1" DOWN FROM TOP EDGE OF DOOR, AND 3-5/8" FROM END OF DOOR. (THIS WILL LEAVE A 1/8" GAP BETWEEN TOP OF DOOR AND BOTTOM OF TRACK). DEPTH OF HOLE SHOULD BE HALF OF DOOR THICKNESS PLUS +/- 3/8".

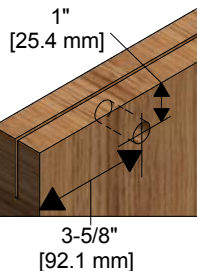


### STEP 5

PREPARE DOOR FOR INSTALLATION OF OPTIONAL PRODUCTS SUCH AS GUIDE CHANNELS, CUP PULLS, DOOR LOCKS, ETC. AS REQUIRED. INDIVIDUAL INSTRUCTIONS ARE PROVIDED WITH THE RESPECTIVE PRODUCT.


### STEP 6

LOCATE C-1202 GUIDES AND SECURE TO FLOOR WITH #8 X 3/4" SCREWS (4). IT MAY BE NECESSARY TO INSTALL DOOR, DETERMINE GUIDE LOCATION, REMOVE DOOR AND THEN SECURE GUIDES TO FLOOR. IF USING OPTIONAL C-201 GUIDE CHANNEL, INSTALL C-200 GUIDE IN PLACE OF THE C-1202 GUIDES. IF USING C-600 SERIES AND C-238 GUIDE THRESHOLD, INSTALL IN PLACE OF C-1205 GUIDES.

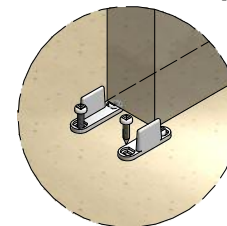

### STEP 7

LOCATE DOOR UNDER HANGERS AND LIFT TO PLACE HANGERS INTO KERF SLOT AND LINE UP HOLES (DRILLED IN STEP 4) WITH HOLES ON BOTTOM OF HANGER. INSERT NYLON EXPANSION SLEEVE AND TIGHTEN WITH ROBERTSON SCREWDRIVER.

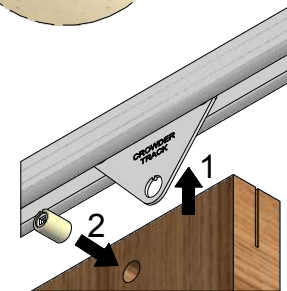

### STEP 8

IF USING OPTIONAL C-100 DOOR STOP, INSTALL IN TRACK AT DESIRED LOCATION.



**K.N. CROWDER MFG. INC.**

1220 BURLOAK DRIVE  
BURLINGTON, ONTARIO, CANADA, L7L 6B3  
TOLL FREE TELEPHONE: 1-866-999-1KNC (1562)  
TOLL FREE FAX: 1-800-567-0123

**K.N. CROWDER INC.**

210 EIGHTH STREET SOUTH  
LEWISTON, NEW YORK, U.S.A. 14092  
TELEPHONE: 1-716-754-8247  
TOLL FREE FAX: 1-800-567-0123

WEBSITE: [www.kncrowder.com](http://www.kncrowder.com) --- E-MAIL: [customerservice@kncrowder.com](mailto:customerservice@kncrowder.com)