
## C-94BL-CT Security Lockset Installation Instructions

### **Specifications**

Case: Heavy gauge wrought Armor Front: Brass, bronze, stainless Cam: See details on right Door Thickness: 1 3/4 in [44.5 mm]

Note: Cylinder will not sit flush with 1 3/8 in [34.9 mm] doors.

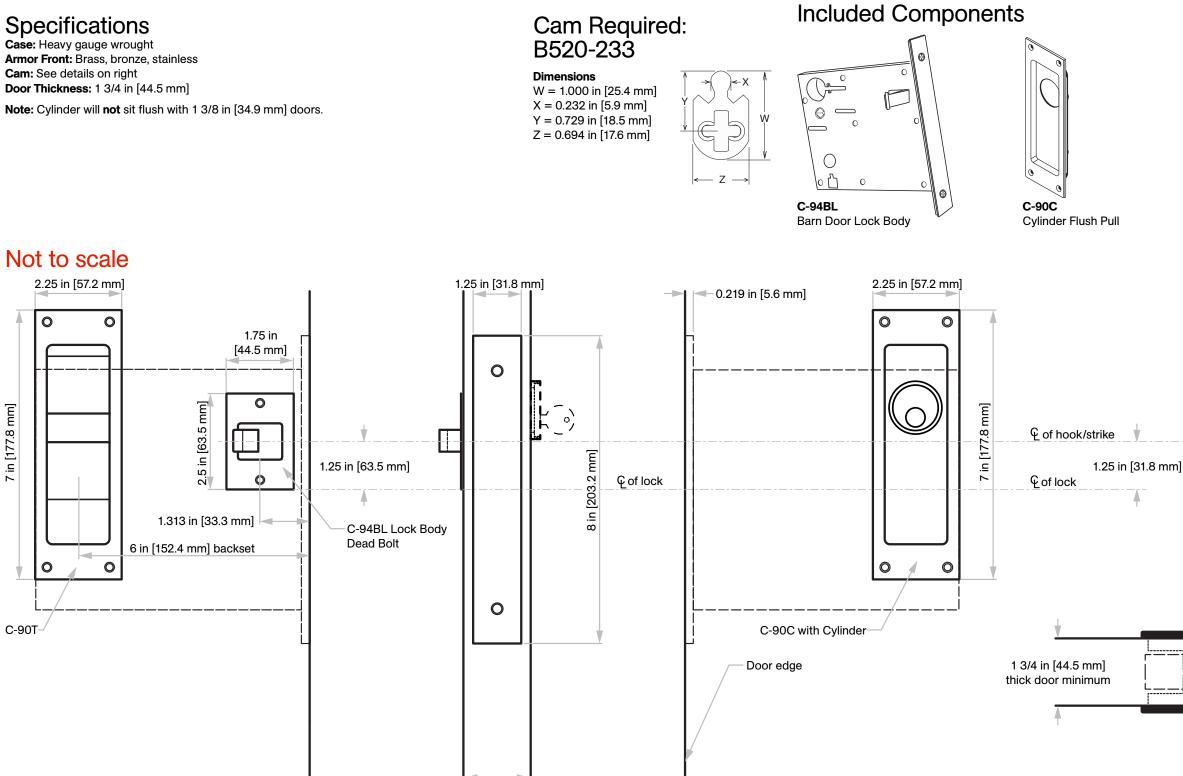


Minimum 1 3/4 in [44.5 mm] thick door

7 in [177.8 mm]


C-90T



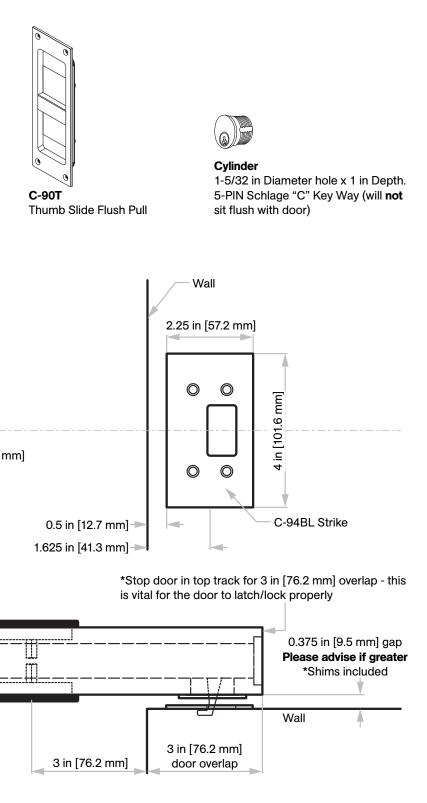

**Note:** Door size = opening width plus 6 in [152.4 mm] Example: 40 in [1016 mm] opening + 6 in [152.4 mm] = 46 in [1168.4 mm] wide door

# **Door Prep Template**

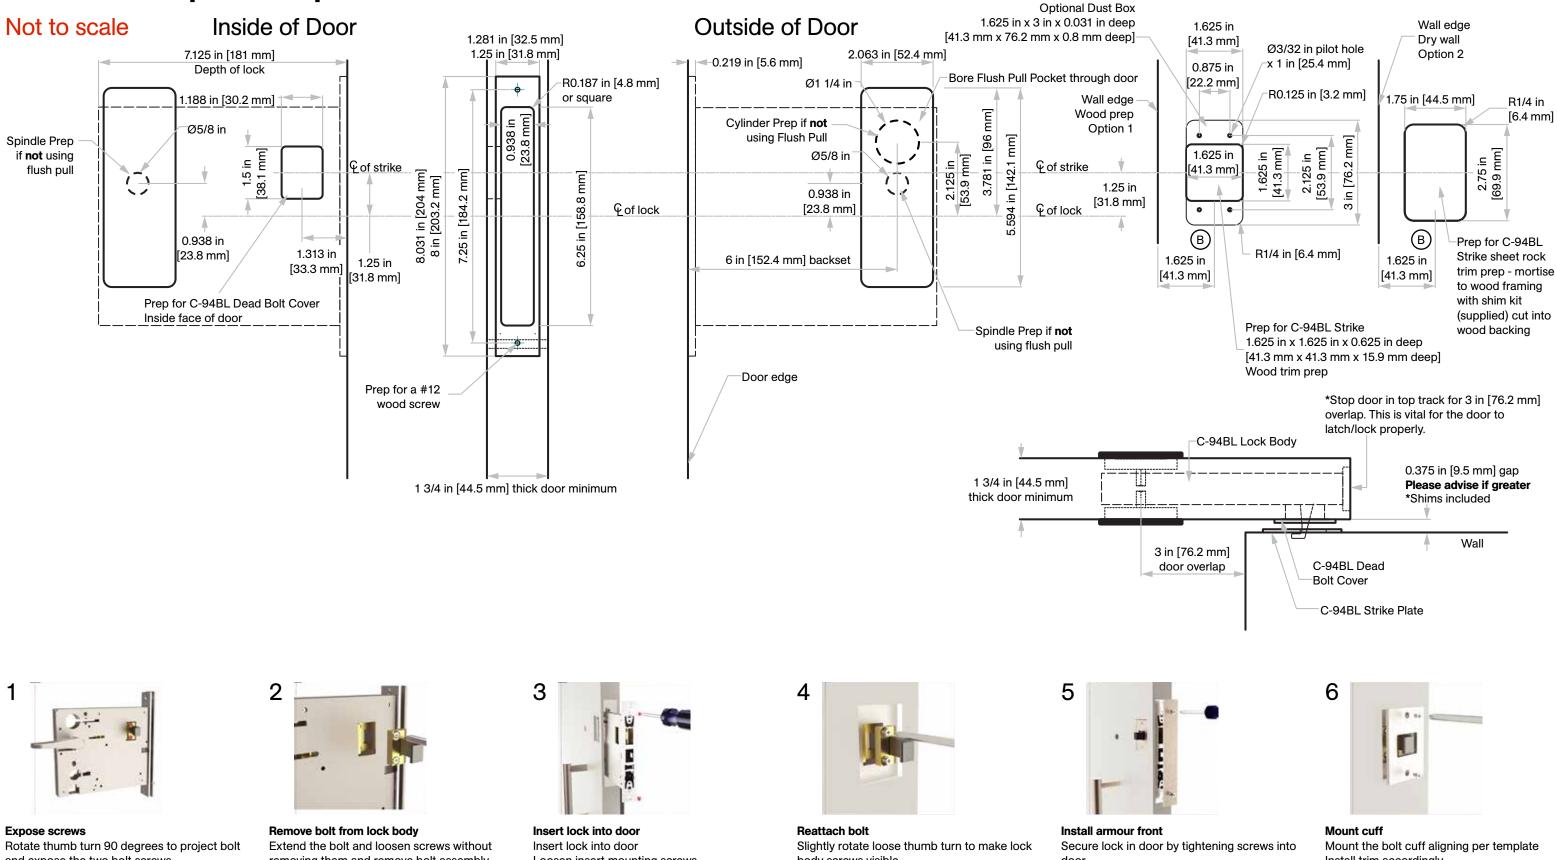



and expose the two bolt screws




removing them and remove bolt assembly from the lock



Loosen insert mounting screws



body screws visible Reinstall bolt assembly by aligning screw holes **Tighten screws** Use thumb turn to fit bolt assembly back in

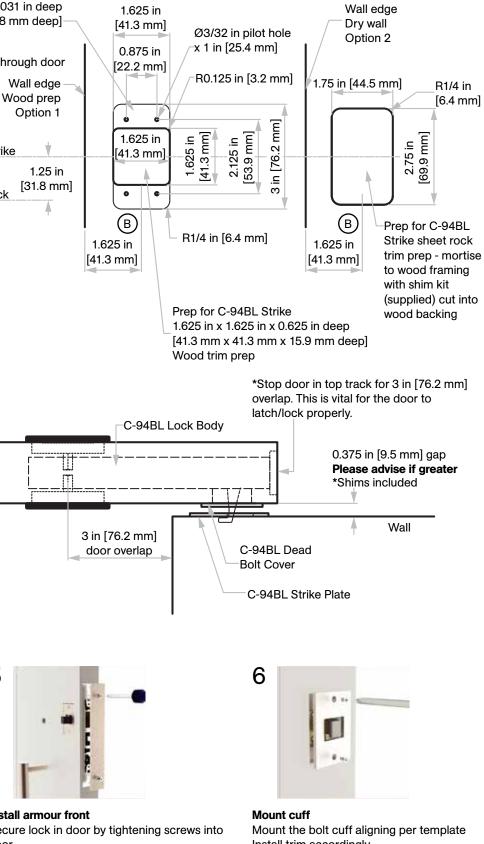

door Install armour front onto basefront

Install trim accordingly

## Strike Kit Supplied Standard



Strike Plate | 0.125 in [3.2 mm] thick


Number of drywall shims used is a function of drywall thickness.

Number of strike shims used is a function of the gap between the face of the door and the wall.

 Image: Non-Section Conduct
 1220 Burloak Drive, Burlington, Ontario, Canada, L7L 6B3

 T. 1–866–999–1562
 customerservice@kncrowder.com

 © 2020-2025 K.N. Crowder Mfg. Inc. All Rights Reserved.
 kncrowder.com

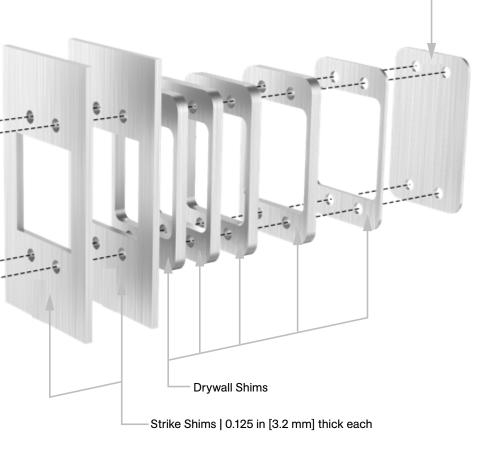

Back Plate | 0.06 in [1.5 mm] thick