








# Strike Kit

Supplied Standard

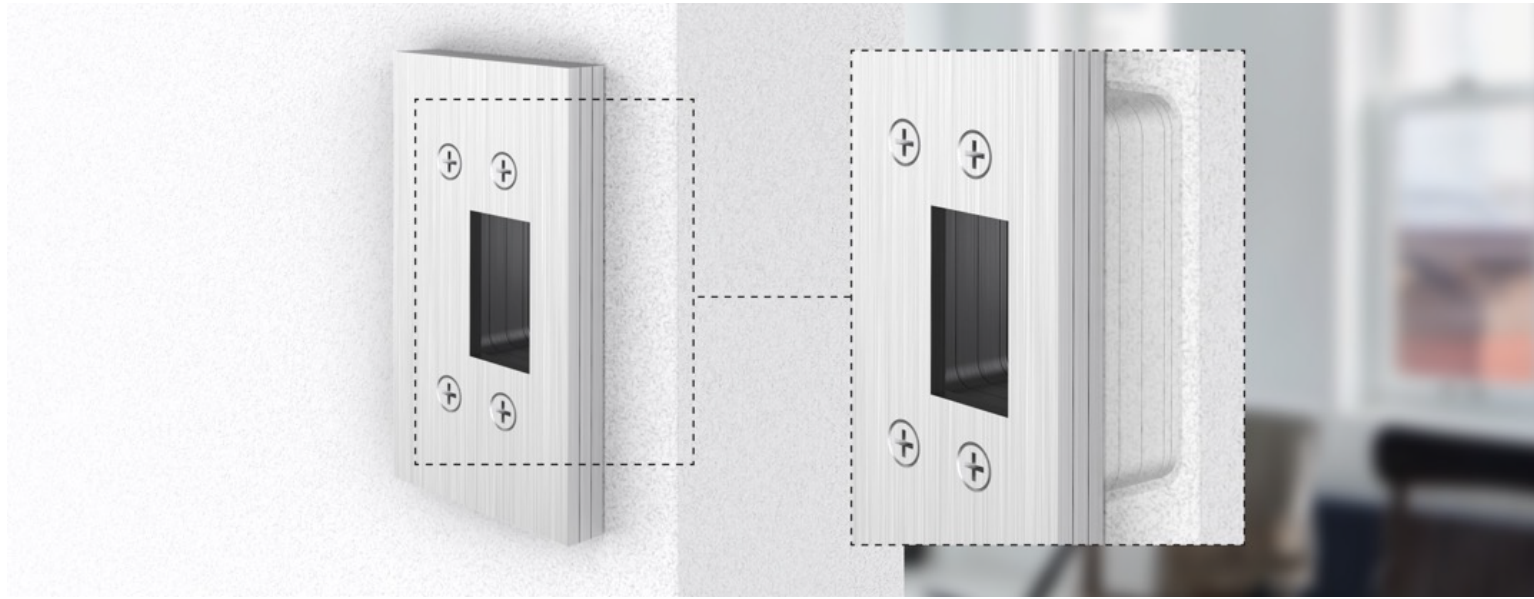

Not to scale

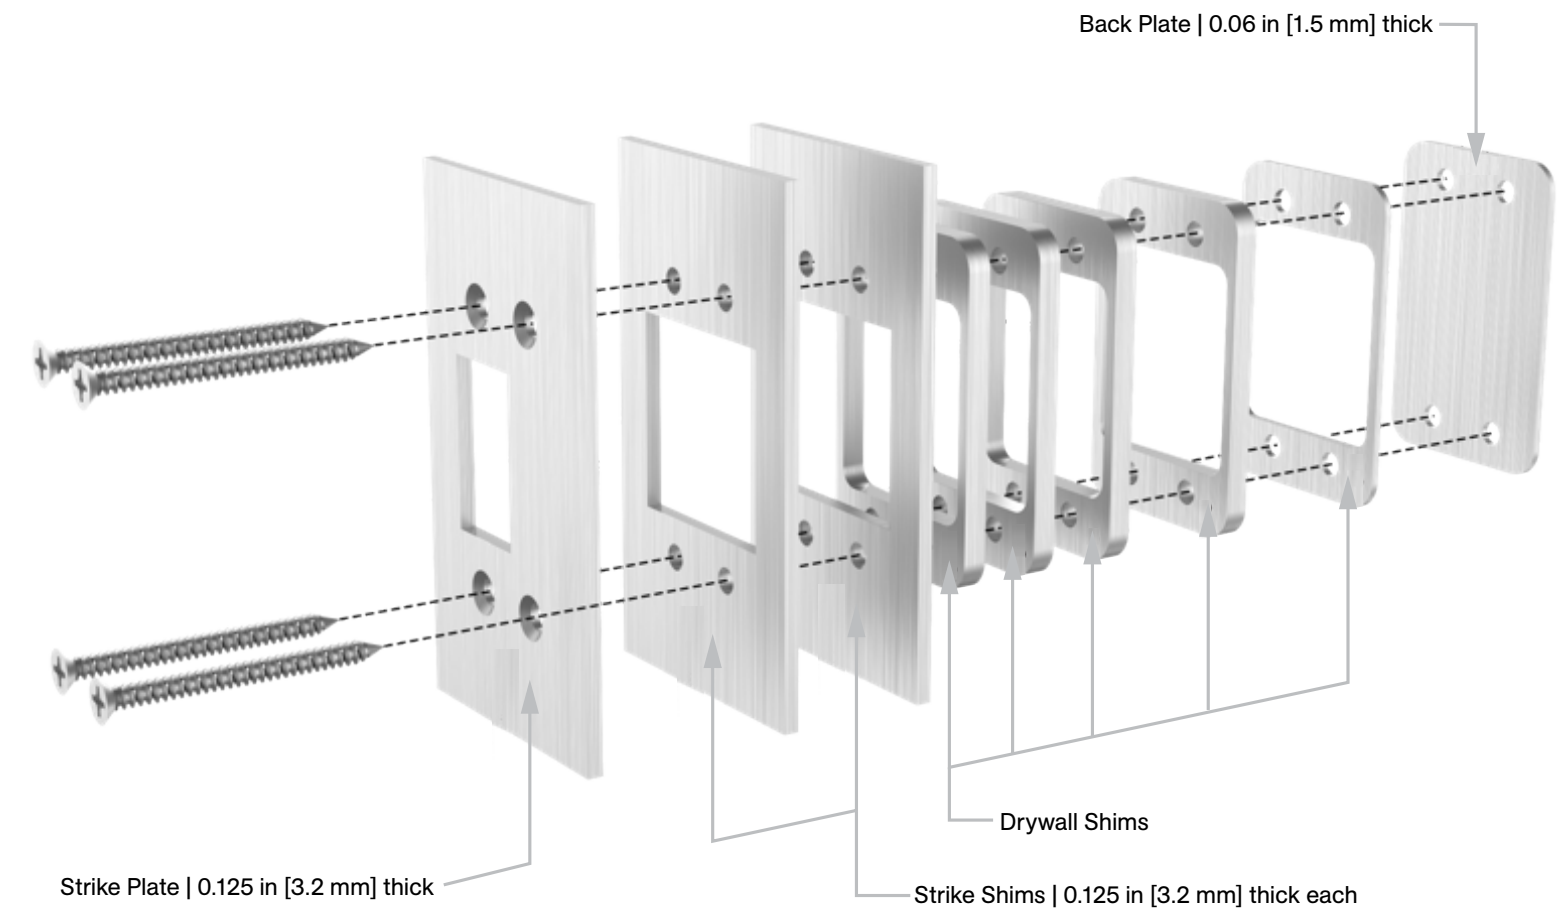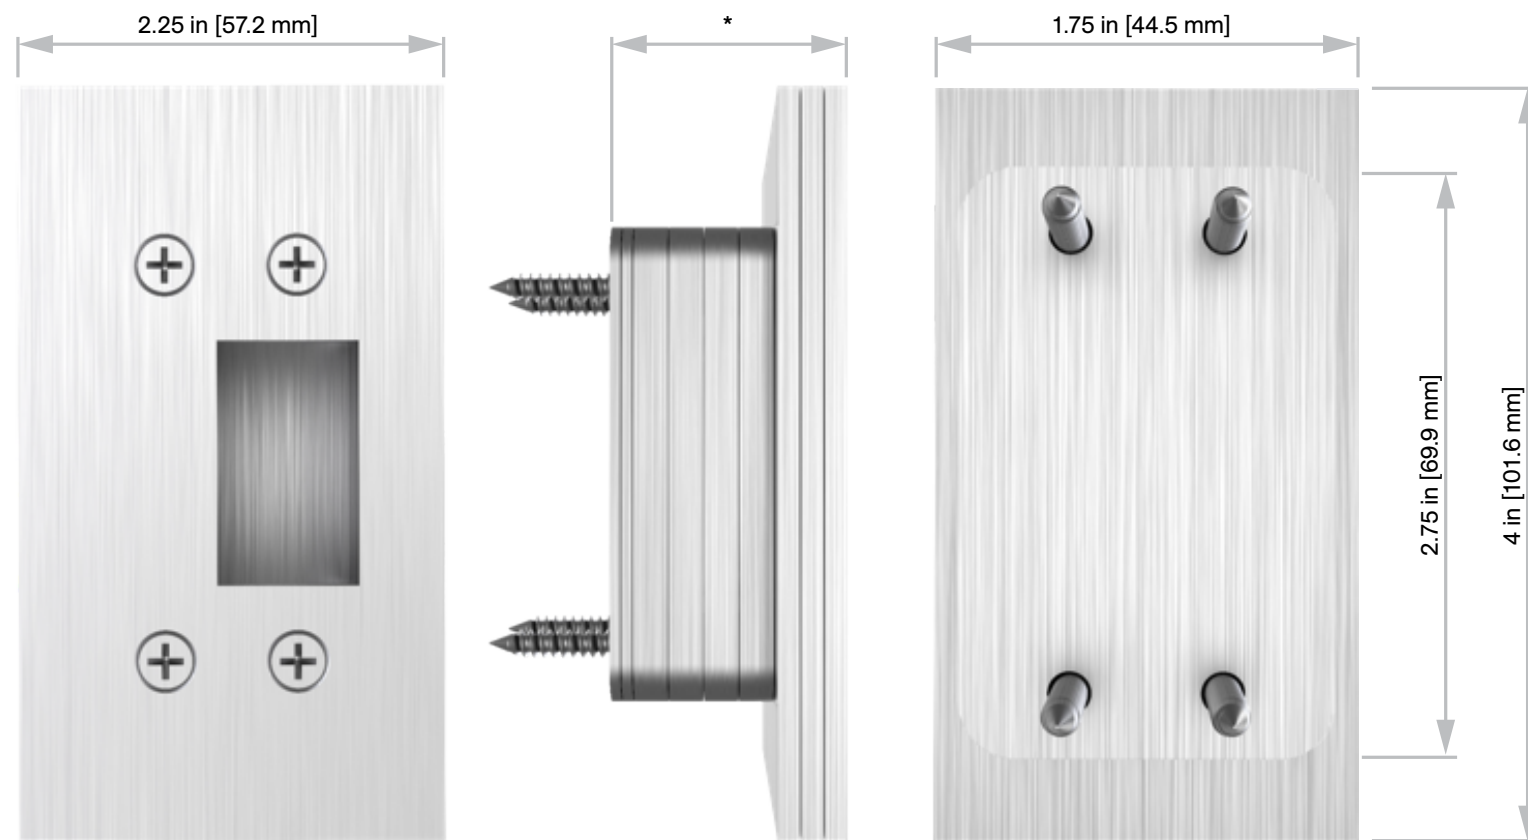

Number of drywall shims used is a function of drywall thickness.

Number of strike shims used is a function of the gap between the face of the door and the wall.